





USER GUIDE

Hydraulic Tipper Kit Wireless Remote

HTRW


Remote & Receiver Module



- 1 Power cord connector
- 2 Power cord
- 3 Ground wire connector
- 4 Ground wire
- 5 UP button (raise trailer/ute tray)
- 6 DOWN button (lower trailer/ute tray)
- 7 ON button
- 8 Remote signal light
- 9 Signal receiver
- 10 Receiver power light

Install

- 1 Attach the ground wire of the wireless remote module securely to the front of the power pack, ensuring the nut is tightened.
- 2 Connect the power cord of the wireless remote module to the power pack.
- **3** Switch on the power to the power pack. This will cause the red light on the module to appear and remain illuminated.

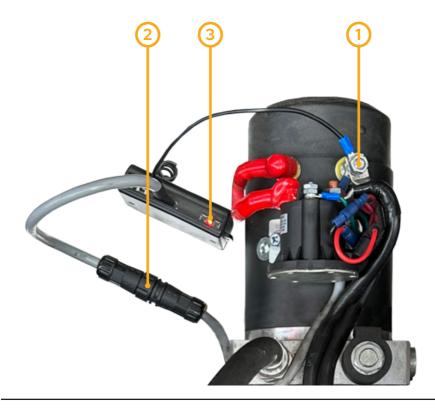


Connect


- 1 Insert two AA batteries into the back of the remote.
- 2 Press the remote's ON button.
- 3 Simultaneously (at the same time), press and hold the remote's UP and DOWN buttons for seconds. The light on the remote will turn green.
- **4** The light on the remote should remain green, indicating a successful connection. You can now use the remote to control the trailer's tipping mechanism.





Your trusted supplier of trailer parts

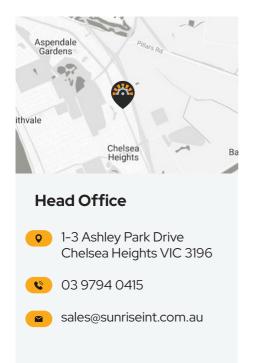

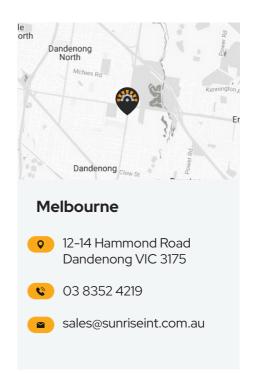

- 20+ years experience
- Trade accounts
- Trusted by over 500 brands

- Fast turnaround
- Abundant stock
- Australia-wide delivery

Over 2000+ products












Trailer

Truck Body

Winches

Electricals

Hardware

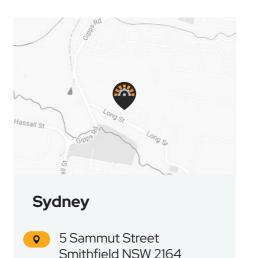


sales@sunrisetrailerspares.com.au

02 8798 4214

0

 \sim

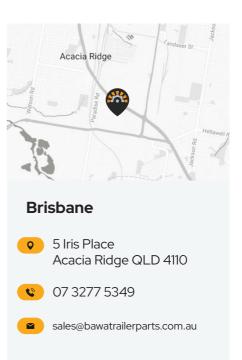

VISIT OUR SITE

sunriseint.com.au





sunriseint.com.au