




# SUNRISE TRAILER CAGE

## USER MANUAL

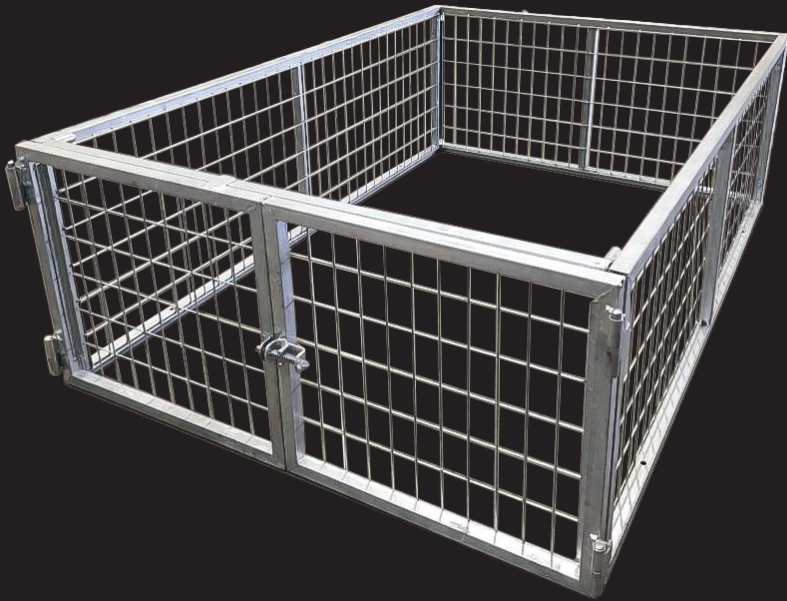

 03 9794 0415


 [sales@sunriseint.com.au](mailto:sales@sunriseint.com.au)

VISIT OUR SITE

[sunriseint.com.au](http://sunriseint.com.au)




# Specifications

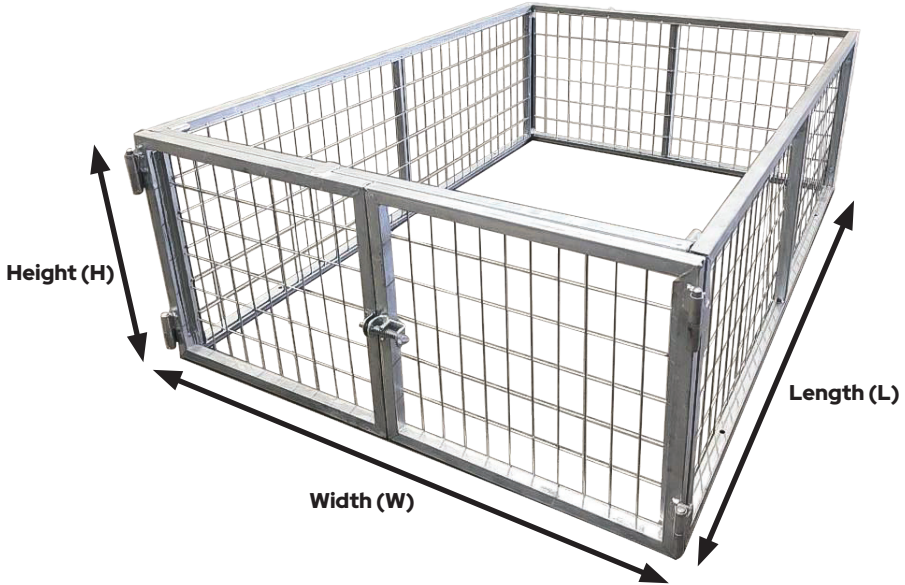

Internal Mesh to Mesh	External Dimensions (mm)		
Cage Type (Feet)	Length (L)	Width (W)	Height (H)
6 x 4 x 2	1900	1300	600
6 x 4 x 3	1900	1300	900
7 x 4 x 2	2200	1300	600
7 x 4 x 3	2200	1300	900
7 x 5 x 2	2200	1600	600
7 x 5 x 3	2200	1600	900
8 x 5 x 2	2500	1600	600
8 x 5 x 3	2500	1600	900
10 x 5 x 2	3120	1600	600
10 x 5 x 3	3120	1600	900
10 x 6 x 3	3120	1900	900
12 x 6 x 3	3730	1900	900

- Dimensions are approximate as when putting the cage together there is space
- Cage is made of approximately 30mm x 30mm square tubing
- Internal dimensions are from inside mesh to inside mesh ( 6 x 4 x 3 )


# Installation Guideline

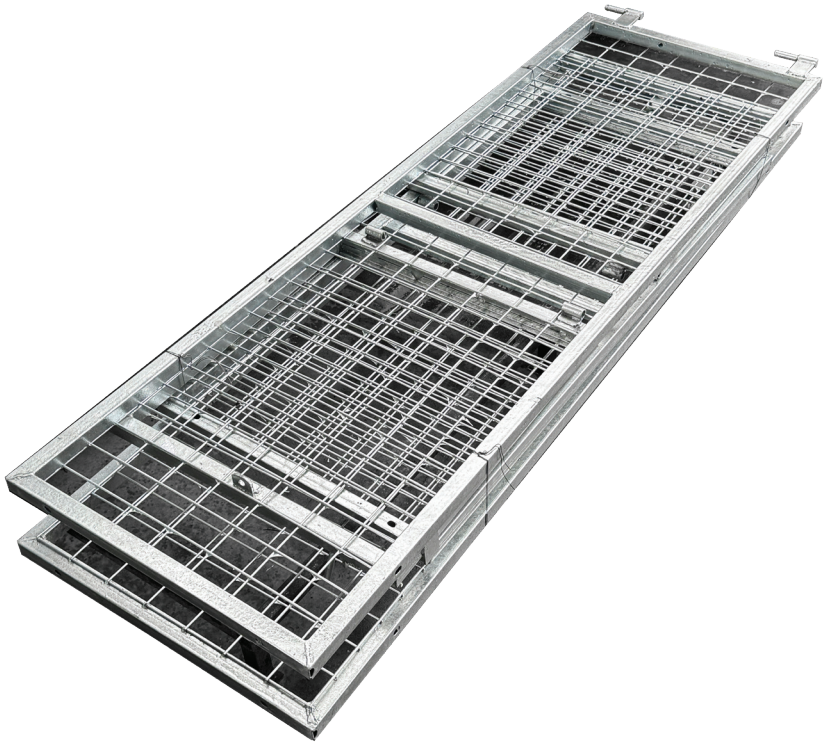

## Step 1 – Unpack & Prepare

The trailer cage is supplied flat packed and requires assembly before installation onto the trailer. Carefully unpack all cage panels and hardware, then lay the components on a clean, flat surface. For easier assembly, it is recommended that two people complete the installation process.

# Installation Guideline

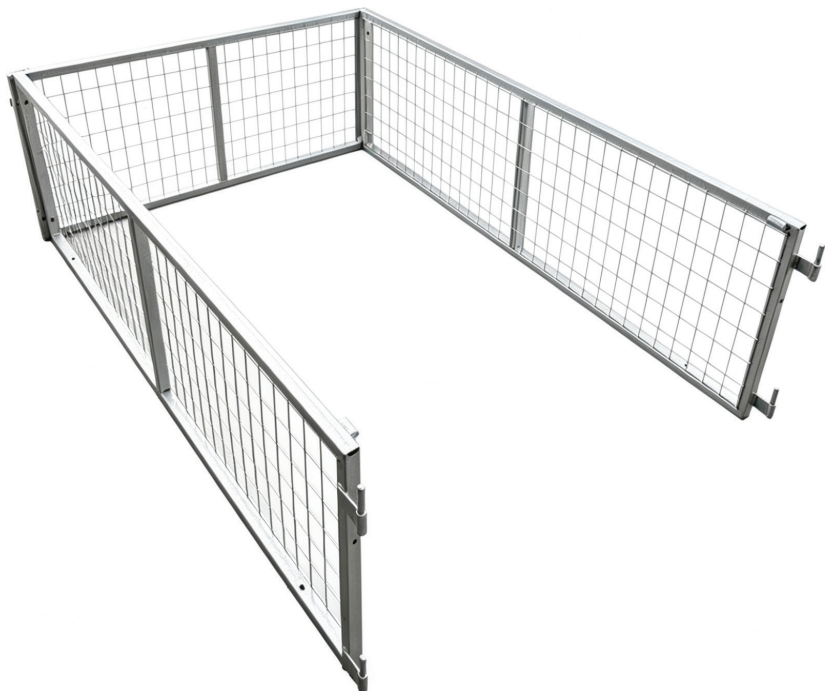

## Step 2 – Position the Panels

Stand all cage panels upright and position them together in the correct layout.

Align the corners and hinge points of each panel before connecting them. Ensure all panels are sitting square and level prior to tightening any fittings.

# Installation Guideline



## Step 3 – Install the Front Fixed Panel

Start with the front fixed panel and align it with the side panels.

Insert the 4 supplied bolts through the mounting holes and fully tighten all bolts securely once the panel is correctly positioned.

# Installation Guideline



## Step 4 – Install the Rear Door Bar

Fit the rear door removable bar into position through the mounting brackets. Once fitted correctly, insert the R-clip to lock the bar securely in place.

# Installation Guideline



## Step 5 – Install the Rear Door

Fit the rear doors into position and align them with the hinge points.  
Once fitted correctly, insert the R-clip to lock the doors securely in place.

# Installation Guideline



## Step 6 – Secure Cage to Trailer

Position the assembled trailer cage onto the trailer and align it with the skirting.

Drill mounting holes through the trailer skirting to match the cage mounting points, then insert and tighten all bolts securely to fasten the cage to the trailer.