

03 9794 0415 sunriseint.com.au/wolf/



STEP 1 CHOOSE YOUR MODEL





4000KG Rating Tandem

WIS4.0TT

WIS2.2TS 2200KG Rating Single



WIS1.6TS 1600KG Rating Single



2800KG Rating Tandem

WIS2.8TT







Carbon Black



KYB Red







Marine Blue

STEP 3 CHOOSE YOUR BRAKE TYPE

Sunrise Orange



Electric Drum Brake OFF-ROAD




Hydraulic Disc Brake




STEP 4 CHOOSE YOUR STUD PATTERN






Landcruiser 6 Stud

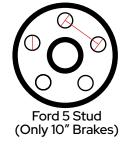

Stud Pattern	Stud PCD	Stud Distance	Common Stud Size
Landcruiser 5 Stud	5 x 150mm	88.20mm	9/16″
Landcruiser 6 Stud	6 x 139.7mm	69.85mm	1/2″
Ford 5 Stud	5 x 114.3mm	67.18mm	1/2″

STEP 5 TELL US YOUR WHEEL OFFSET

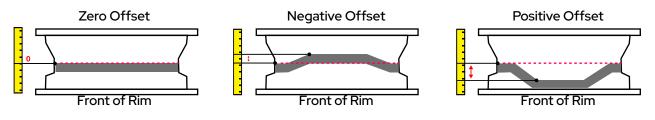


There are three common types of wheel offset you may encounter:

Place the straight edge across the back of the wheel so that it spans the entire width. Measure from the mounting surface to the centerline of the wheel. If the mounting surface is towards the outside (front) of the wheel, it's positive offset. If it's towards the inside (back), it's negative offset. The measurement is typically in millimeters.

STEP 6 TELL US YOUR CLEARANCE REQUIRED

The recommended clearance for chassis to tire distance is 50mm, measured from the outer wall of the chassis to the edge of the tire.

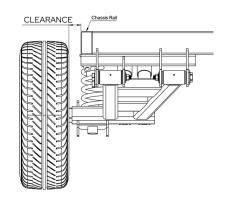



ORDER FORM

Code	WIS1.6TS	WIS2.8TT	WIS2.0TS	WIS4.0TT
Stub Profile	Parallel	Parallel	2Т	2Т
ATM (Aggregate Trailer Mass)Rating	1.6T - Single	2.8T - Tandem	2.2T - Single	4.0T - Tandem
Brakes (Electric or Hydraulic)				
Stud Pattern (L/C 5, L/C 6, Ford 5)				
Wheel Offset and Tyre Width				
KYB TENAFORCE Shock Absorbers	Single - 1 Pair	Single - 1 Pair	Twin - 2 Pairs	Twin - 2 Pairs
Suspension Colours				
Clearance				
QTY				

Other:

To Be Filled By Customer		For Order Only		
Quote	Order	Purchase Order#		
		Delivery	Pick Up	
Name:		Requested Due Date:		
Company:		Any Other Requests or Information:		
Address:				
Phone:				
Email:				



Email all orders to <u>sales@sunriseint.com.au</u> or to your respective branch sales representative

